


Wiring diagram and dip switch settings for Harman Kardon MMI for cars with original 8" screen.

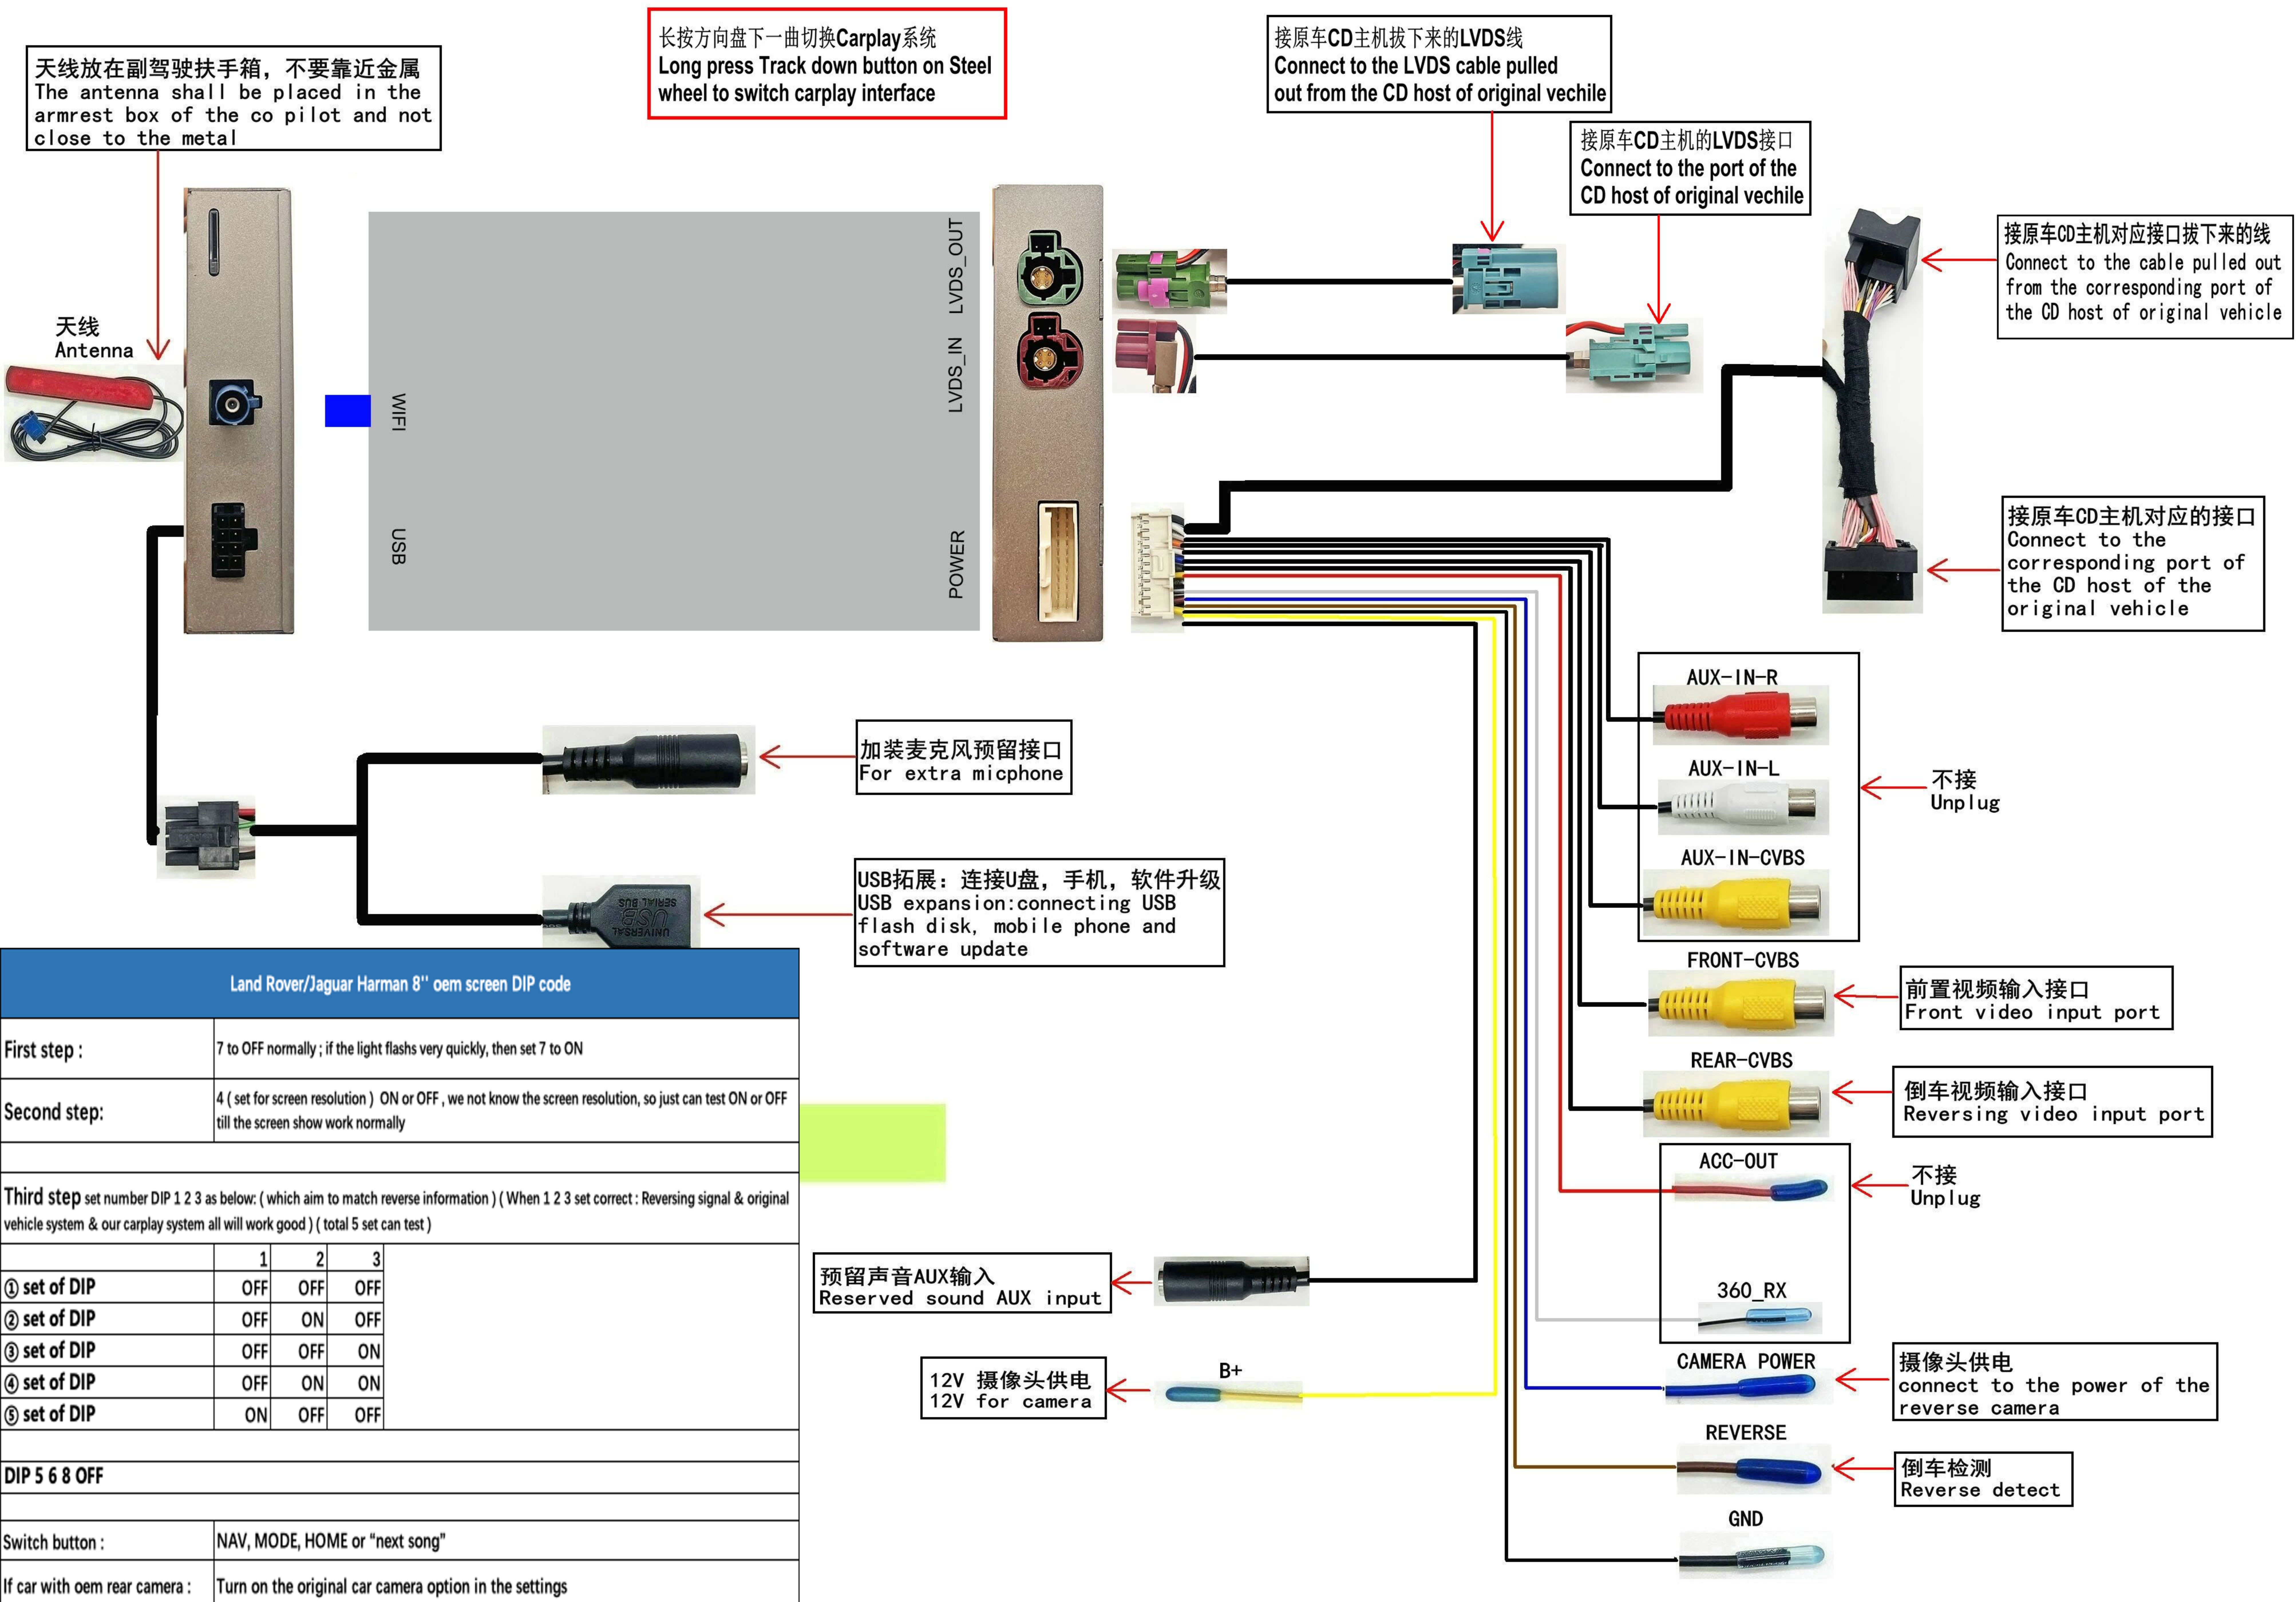

Land Rover/Jaguar Harman 8" oem screen DIP code			
First step :	7 to OFF normally ; if the light flashes very quickly, then set 7 to ON		
Second step:	4 (set for screen resolution) ON or OFF , we not know the screen resolution, so just can test ON or OFF till the screen show work normally		
Third step	set number DIP 1 2 3 as below: (which aim to match reverse information) (When 1 2 3 set correct : Reversing signal & original vehicle system & our carplay system all will work good) (total 5 set can test)		
	1	2	3
① set of DIP	OFF	OFF	OFF
② set of DIP	OFF	ON	OFF
③ set of DIP	OFF	OFF	ON
④ set of DIP	OFF	ON	ON
⑤ set of DIP	ON	OFF	OFF
DIP 5 6 8	OFF		
Switch button :	NAV, MODE, HOME or "next song"		
If car with oem rear camera :	Turn on the original car camera option in the settings		